


USER MANUAL

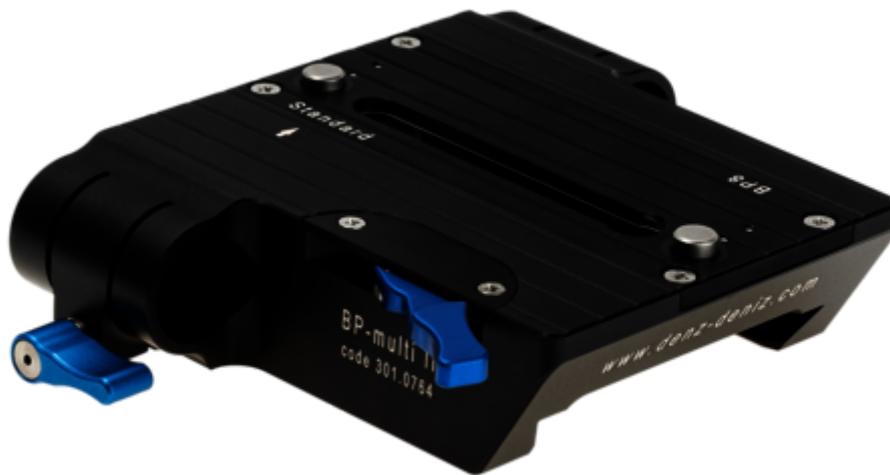

Bridge Plate Multi

C0100024

Adjusting dovetail clamp

1. Remove the cover plate (A) by loosening two screws.
2. Loosen four screws of the clamping lever (B).
3. In case the dovetail clamping force is too tight, turn the tightening screw (C) anti-clockwise by 90°.
4. In case the dovetail clamping force is too loose, turn the tightening screw (C) clockwise by 90°.
5. Fasten both clamping lever (B) and cover plate (A) again.
6. Repeat if desired clamping force is not achieved.

